


## Securing the APR

Antitheft devices usually include a segment of metal-stranded cable with an attached locking device and associated key. For instructions on installing this kind of antitheft device, see the documentation that came with the device.

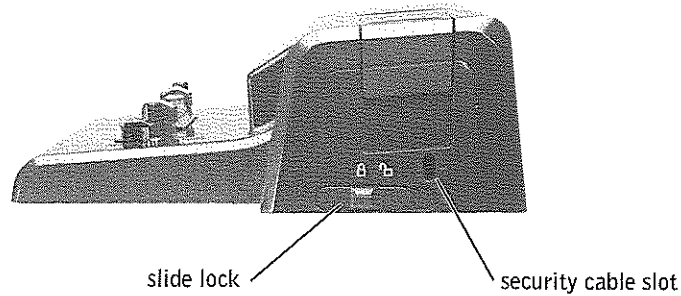

The APR has the following security features:

**SLIDE LOCK** — Move the lock toward the front of the APR (locked position) to secure the computer in the APR. Move the lock toward the back of the APR (unlocked position) before using the eject button. The red color in the security cable slot indicates the unlocked position.

**SECURITY CABLE SLOT** — Lets you attach an antitheft device to the APR when the slide lock is in the locked position.

A commercially available antitheft device usually includes a metal cable with an attached locking device and key. For instructions on installing an antitheft device, see the documentation that came with the device.

## Undocking Your Computer

**NOTICE:** If the computer is not receiving power from a battery, the computer turns off when you undock it and you will lose any unsaved data.

1 Save and close any open files and exit any open programs.

**NOTICE:** Never undock the computer without first preparing the computer to undock. If you undock before preparing the computer, you will lose data. If you accidentally undock the computer without first preparing to undock and your computer stops responding, press the power button until the computer turns off and restart the computer. Any unsaved data will be lost.

2 You can undock the computer from the APR while the computer is either in a power management mode or turned off.

3 Before you physically remove the computer from the APR, prepare the computer for undocking:

- If you are using the Windows 2000 operating system, click the **Start** button and click **Eject PC**. If you are using Windows XP, click the **Start** button and click **Undock Computer**.

or

- Press the undock request button on the APR. The undock request light turns from steady green to blinking green and then turns off.

When the eject button light turns green, the computer is ready to be undocked.

